



flexi-ban™

ELASTOMETRIC JOINT BANDAGES


Cureflex Flexi-Ban range is an innovative new form of high performance flexible bandage used in critical junction points during waterproofing installation. It forms an integral part of waterproofing system that provides excellent protection in high risk areas without altering Membranes performance.

Cureflex Flexi-Ban offers piece of mind protection in challenging high risk areas such as:

- Roof Tops
 - Shower Cubicals
 - Bedroom Walls & Floor Junctions
 - Balconies, Terraces and Retaining Walls
 - Laundries, Powder Rooms, General wet areas
- 100% Compatible with Cureflex Primer, Waterproofing Membrane, Sealants & Adhesives
 - Eliminates the need for Bond Breakers Sealants, Backing Rods, Foam, Fabrics and Tapes
 - Provides 100% elastic recovery, waterproof and vapour proof
 - Rupture resistance, high tensile strength and high elongation
 - Wall to floor internal and external junctions
 - Optimum superior sealing and protection
 - Pipes and penetrations on walls & floors
 - Control, movement and expansion joints
 - Save time & money – Easy to install
 - No lap joints or welds

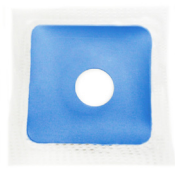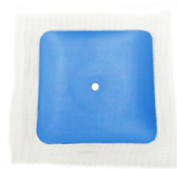

Pipes / Spindles 5mm Pipes / Spindles 28mm 100mm Pipe/Puddle flange

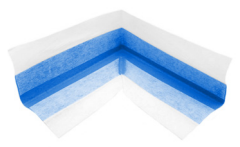

Floor - Wall internal junction Floor - Wall External junction



Demtech Australia Pty Ltd
P.O. Box 4535 Knox City
Centre VIC 3152

info@demtech.com.au
Technical Support: 1300 300 090

Cureflex is a Registered Trademark - All Rights Reserved

