


flexi-ban™

ELASTOMETRIC JOINT BANDAGES


Cureflex Flexi-ban range is an innovative new form of high performance flexible bandage used in critical junction points during waterproofing installation. It forms an integral part of waterproofing system providing excellent protection in high risk areas, without altering membranes performance.

Cureflex Flexi-ban offers piece of mind protection in challenging high risk areas such as:

- Rooftops
 - Shower cubicals
 - Bedroom walls and floor Junctions
 - Balconies, terraces and retaining walls
 - Laundries, powder rooms, general wet areas
- 100% compatible with Cureflex primer, waterproofing membrane, sealants and adhesives
 - Eliminates the need for bond breakers sealants, backing rods, foam, fabrics and tapes
 - Provides 100% elastic recovery, waterproof and vapour proof
 - Rupture resistance, high tensile strength and high elongation
 - Wall to floor internal and external junctions
 - Optimum superior sealing and protection
 - Pipes and penetrations on walls and floors
 - Control, movement and expansion joints
 - Save time and money – easy to install
 - No lap joints or welds

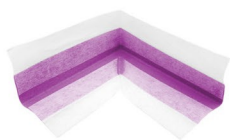


Floor to wall internal junction

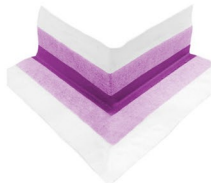

Floor to wall external junction



Pipes/spindles 5mm

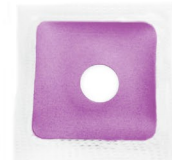

Pipes/spindles 28mm



Pipe/puddle 100mm



Demtech Australia Pty Ltd
P.O. Box 4535 Knox City
Centre VIC 3152

info@demtech.com.au
Technical Support: 1300 300 090

Cureflex is a Registered Trademark - All Rights Reserved

